
Front left adapter Iveco

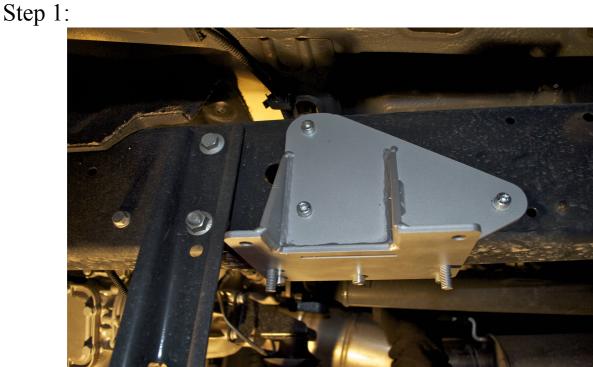

The adapter must be placed just behind the gearbox cradle and is fixed using the three M8 screws supplied, without drilling any holes on the frame if the frame is of the latest model (BLACK) otherwise drill the 3 holes.


Step 2:



Then mount the clamp on the inside of the frame.

JACK WITH MOTOR OUTSIDE OF VEHICLE AND ROTATION REAR

Front right adapter Iveco

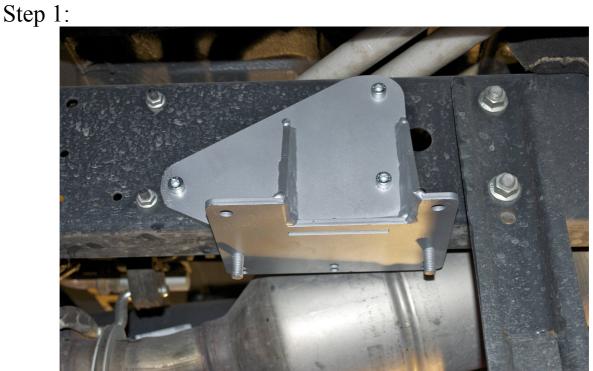

The adapter must be placed just behind the gearbox cradle, follow the same procedure as the front left adapter

Punto 2:



Then mount the clamp on the inside of the frame.

JACK WITH MOTOR OUTSIDE OF VEHICLE AND ROTATION REAR

Rear left adapter Iveco



Put the adapter rear the rear axle, be carefull that the adapter is completely insert before drill the holes, is some case is possible to use holes already present on the chassis.




Step 2: Fit the jack (follow the manual for adjustments)

Step:

FIT THE JACKS IN THE MOST CONFORTABLE POSITION FOR THE TRAVEL POSITION, THE ADAPTER IS PREPARED FOR FIT THE JACK IN DIFFERENT SETTING

EXAMPLE OF INSTALLATION OF REAR JACKS ON IVECO

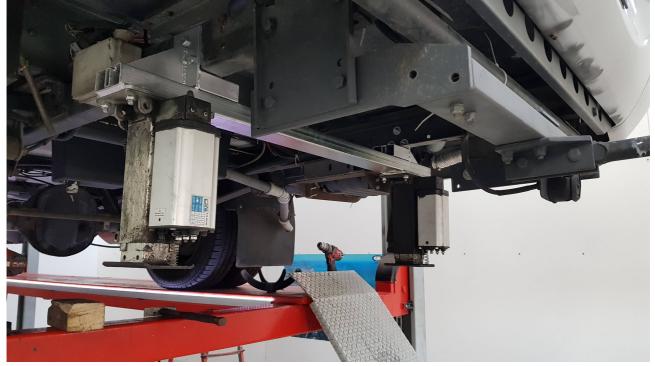

EXAMPLE OF INSTALLATION OF FRONT JACKS ON IVECO

